



**selectline**  
**selectline.team**

— **Selectliner**  
**user manual**

# Selectliner user manual

The Selectliner package contains:

- Selectliner
- Empty jerrycan
- Charger
- Essential kit

## First steps:



1

Unpack all items from the box.



2

Adjust the handle bar to the desired height.



5

Install the front assembly and firmly tighten the butterfly screws. Ensure the spray head is facing forward and connect the tube to the spray head.



3

Connect the cable plug to the socket on the chassis.



4

Extend the support sleeves at front of the machine.



6

Set the discs to the desired width of the line.



7

Feed the cable through the holes provided in the chassis.



8


Feed the cable through the hole in the cable clamp bolt and tighten it. The sheath should also be tight.

9



To keep the discs off the ground permanently press the button on the handle while squeezing it.

10

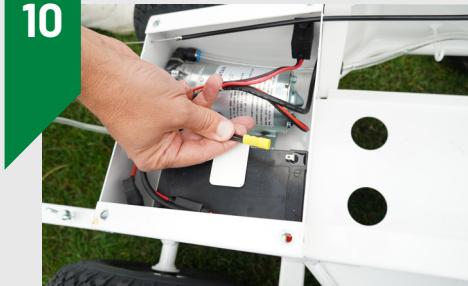

Attach the yellow plug to the battery. Replace the lid and secure using supplied bolts and allen key.

11



Connect the tube to the suction rod.


12



Connect the charging plug to the machine and the charger to a 220V socket. An indicator light tells you the charge level. The battery is fully charged when the '5' lights up green.

## Prepare to mark:

13

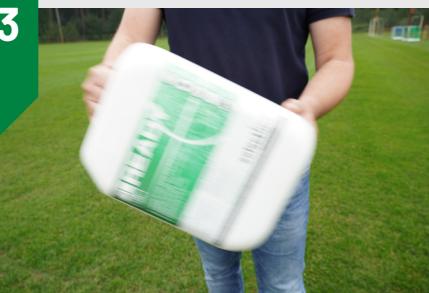


Shake the paint can well and place the suction rod in the can. Then place the can in the machine.

14



Grab your nozzle, nozzle holder, flat seal and nozzle filter.\*

15

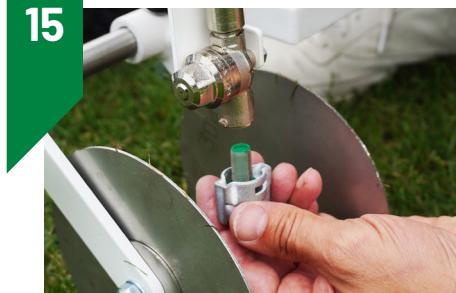

Put the nozzle in the nozzle holder, place the flat seal firmly on top of it and finally the filter. Then screw the nozzle holder onto the spray head.

16



Turn the ball valve to vertical position.

17



Switch on the machine and rinse until paint comes out.

18



As soon as paint comes out, return the ball valve to horizontal position.

19



Set the desired spray height.

20



You're ready to mark!

\*We recommend to use the 3mm flat seal for the purple, red & white nozzle (RTU low consumption paints). For the yellow nozzle (concentrated paints and RTU high consumption paints) use the O'ring and the 4mm flat seal.

# Cleaning:

21



Clean the suction rod.

22



Put the suction rod in the can with water or add our Selectline Cleaner.

23



Turn the ball valve to vertical position and rinse the tubes by pressing the switch.

24



Return ball valve to horizontal position to rinse spray head and nozzle.

25



Remove nozzle holder.

26



Separate all parts and disassemble the nozzle.

27



Clean the nozzle and filter and place all items in a small container filled with water or add our Selectline Cleaner.

28



Charge your Selectliner for the next time.